

# Warranty Policy

## **Warranty Term:**

This product is covered by a 12-month limited warranty from the date of purchase.

## **Important Notes:**

- A valid proof of purchase must be issued by seller at the time of purchase.
- User must properly retain the proof of purchase. These will not be replaced if lost.
- if the product fails due to non-human factors, the user can go to the seller with the proof of purchase for free repairs or one to one exchange within the warranty period.


## **Warranty Exclusions:**

- The warranty period has expired.
- Damage due to misuse, neglect, or failure to follow the user manual.
- Physical damage caused by accidents, drops, or improper handling.
- Unauthorized disassembly, modification, or repair.
- Damage caused by external events (e.g., flood, fire, lightning).
- Missing or inconsistent proof of purchase.
- Normal wear and tear (e.g., scratches, fading, battery aging).
- Issues not related to manufacturing defects or product quality.

## **Need Help?**

Contact us at [support@joacelm.com](mailto:support@joacelm.com)

# USER GUIDE

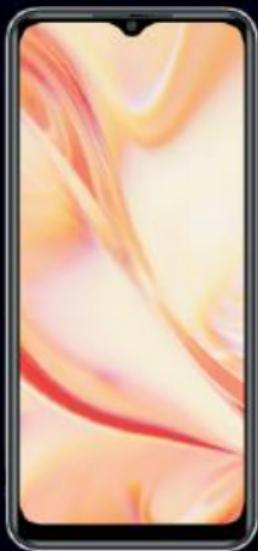

JOACELM

Brand:Joacelm

Model:6507M

## Contents

<b>Getting Started .....</b>	<b>5</b>
Overview .....	5
Key Explained .....	5
Starting up .....	5
Switching Your Phone On/Off .....	6
Getting Around Your Phone .....	7
<b>Phone Calls .....</b>	<b>9</b>
Calling from the Phone .....	9
Calling from Your Contacts .....	9
Calling from a Text Message .....	9
Receiving Calls .....	10
<b>Contacts .....</b>	<b>10</b>
<b>Messaging .....</b>	<b>10</b>
The Message Box .....	11
Sending an Message .....	11
Message Settings .....	11
Touch Input Settings .....	12
<b>Getting Connected to the Internet.....</b>	<b>12</b>

<b>Adding a New Network Connection.....</b>	<b>12</b>
Turning On Wi-Fi.....	13
Connecting to a Wi-Fi Network.....	13
Checking the Wi-Fi Network Status.....	13
USB tethering & portable hotspot.....	13
<b>Browsing the Internet .....</b>	<b>14</b>
<b>Making the Most of Multimedia .....</b>	<b>15</b>
Camera .....	15
FM .....	15
Playing Music .....	15
Gallery.....	15
Sund Recorder .....	16
<b>Sorting out Your Phone Settings.....</b>	<b>16</b>
Bluetooth .....	16
Setting Date and Time.....	17
Display Settings.....	17
Sound Settings .....	17
Language Settings .....	17
Security Settings .....	17
Managing Your Device Memory .....	18
Reset to Factory Settings .....	18
Google.....	18
Clock .....	19
Calculator .....	19
Screen record.....	19

<b>For Your Safety .....</b>	<b>19</b>
General Safety .....	19
Distraction .....	20
Product Handling .....	21
Electrical Safety .....	24
Interference .....	24
Explosive Environments .....	26
System update .....	26
Common fault diagnosis .....	27

# Getting Started

## Overview

### Key

Key	Function
Power Key	<ul style="list-style-type: none"><li>Press to turn on or off.</li><li>Press to restart your phone.</li><li>Press to Screenshot</li><li>Press to Emergency</li></ul>
Home Key	<ul style="list-style-type: none"><li>Press to return to the Home Screen from any application or screen.</li></ul>
Menu Key	Hold to see recently used applications.
Back Key	Press to go to the previous screen.
Volume Keys	Press or hold to turn the volume up or down.

### Starting up

#### Status and Notification icons

Your phone will tell you exactly what is going on by showing you simple icons. Here is what they mean.

	USB connected		Missed call
	Airplane mode		Signal strength

	Battery charge		New message
	Meeting mode		Wi-Fi network
	Alarm set		Earphone insert
	Silent mode		New Wi-Fi network detected
	Bluetooth icon		USB debugging connected

## Installing the SIM/SD

Switch off your phone before installing or replacing the battery, SIM, or memory card.

1. Turn off the phone and use the ejector pin to remove the card slot.
2. Insert the SIM card correctly in the card slot(s).
3. Finally inserted into the card slot.

## Charging the Battery

When you first get your new phone, you will need to charge the battery.

Connect the adapter to the charger jack. Ensure that the adapter is inserted with the correct orientation. Do not force the connector into the charger jack.

Connect the charger to a standard AC wall outlet.

Disconnect the charger when the battery is fully charged.

## Switching Your Phone On/Off

Make sure the SIM card is in your device and the battery is charged.

1. Hold the Power Key to switch on your phone.
2. To switch it off, hold the Power Key to get the phone options. Select Power off, and then tap OK.

## **Setting Up Your Phone for the First Time**

When you first power on your phone after you purchase it or reset it to factory settings (see chapter *Sorting out Your Phone Settings – Privacy: Reset to Factory Settings*), you need to do some settings before using it.

## **Switching to Sleep Mode**

To save battery power, Sleep Mode suspends your device to a low-power-consumption state while the display is off. Your device also goes into Sleep Mode by itself when the display is automatically turned off after a certain period. You can start sleep mode by the following method.

Press Power Key to switch to Sleep Mode.

## **Waking Up Your Phone**

Press **Power Key** to activate your screen display.

Drag to the up.

**NOTE:** If you have set an unlock pattern, PIN, or password for your phone (see chapter *Sorting out Your Phone Settings – Security Settings*) you will need to draw the pattern or enter the PIN/password to unlock your screen.

## **Getting Around Your Phone**

### **Touch Control**

You can use finger gestures to control your phone. The controls on your touchscreen change dynamically depending on the tasks you are

performing.

Tap the buttons, icons, or applications to select items or to open applications.

Flick the screen to scroll up, down, left, or right.

Point, drag and drop to move items across the screen.

Double tap the screen to zoom in/out an image.

**NOTE:** You can view the phone screen in portrait or landscape orientation simply by holding it upright or turning it on its side. Not all screens are viewable in landscape.

## **Home Screen**

In the Home screen, besides the shortcut icon is displayed, you can also set your own wallpaper, add the widgets or application shortcuts you need, or remove them as you like.

### **Choosing Your Wallpaper**

Long Press desktop to select the wallpapers.

### **Adding/Removing items to Your Home Screen**

#### **Enter the Application Program Interface**

In the list of applications, touch and hold the icon until the main screen appears, move the application icon to the idle position, and release the finger.

Press **Home Key** to return to the Home Screen.

Tap and hold the item you want to delete until the remove icon appears on the top of the screen.

Drag the item to the remove icon and release your finger when the item turns red.

# Phone Calls

There are many ways to make a call with your phone. And they are all easy to do.

## Calling from the Phone

Tap  on the Home Screen.

Enter the phone number using the on-screen keypad.

Tap  to delete wrong digits.

Tap the dial icon.

**TIPS:** To make international calls, hold  to enter the “+”

## Calling from Your Contacts

Tap Contacts.

Slide your finger to scroll the contacts list and tap the contact's name you want to call, when the contact details appear, click on the number; choose the SIM card to dial.

You can search for a contact by tapping  on the screen.

## Calling from a Text Message

If a text message contains a phone number that you want to call, you can make the call while viewing the text message.

Press Home key > tap > Messaging.

Tap the conversation and then find the message that contains the phone number you need.

Tap the message, the phone will list the options.

## Receiving Calls

Tap the  icon, drag to right to answer the call.

Tap the  icon, drag to left to reject the call.

During a call, you can mute your microphone so that the person you are speaking to cannot hear you, but you can still hear them.

Tap  to turn your microphone off. To turn your microphone back on, tap .

Tap  during a call to turn the speakerphone on. Tap  again to turn off the speakerphone.

Tap  to finish a call.

## Contacts

You can add contacts on your phone and synchronize them with the contacts in your Google account or other accounts that support contact syncing.

To see your contacts, Tap  from the Contacts Screen. Choose the storage location to save the contact. Enter the contact's name, phone numbers, and other information, and then save it.

Tap  on the Contacts Screen. Input the contact's name you want to search for. The contacts matched will be listed.

## Messaging

Your SMS (text message) and MMS (multimedia messaging service)

are combined into one menu in **Home Key>Messaging**.

## The Message Box

Instead of an inbox and outbox, your phone organizes all Messaging you sent and received into one box, where Messaging exchanged with the same number are grouped into one message thread in the Messaging Screen. You can tap a thread to see the conversation you have had with someone.

## Sending a Message

Tap >Messaging to  create new message.

Enter the recipient's number or name. As you type, matching contacts will appear. Tap a suggested contact to add as a recipient. You can also tap  to select recipients from the contacts.

Tap Type text message and type your message.

Tap the Menu Key to insert quick text or contact.

If you are sending an MMS, tap Menu Key to add a subject, or tap  to attach pictures, videos, audio, or slideshow.

Tap  to send your message.

**NOTE:** Add an attachment to text message and it will be converted into an MMS automatically. Likewise, if you remove all attachments and the subject from an MMS, it will automatically become a text message.

## Message Settings

The phone's message settings are pre-configured for you to use immediately. To change them, tap Menu Key > Settings from the Messaging Screen.

**NOTE:** From SMS/MMS settings screen tap Menu Key > Restore default settings to change the message settings back to the original.

## Touch Input Settings

Choose the touch input settings by press **home key** > tap  >**Settings**>**Language & input** from Home Screen.

In the **Keyboard & input methods** section, you can choose the settings that you need.

## Getting Connected to the Internet

Your phone's impressive networking capabilities allow you to access the Internet or your corporate network with ease.

You can use default connection settings to connect to the Internet via your mobile network, or Wi-Fi.

The network connection can be enabled /disabled manually. Tap  >**Settings**>Network and internet>Mobile data to choose SIM to use for cellular data.

## Adding a New Network Connection

To get connected via your mobile network you need a data plan with your service provider. Also, if the networks settings are not pre-configured on your phone, please contact your provider to get the necessary information.

You can view settings by tapping>**Settings**>Network and internet>Mobile network >advanced>Access Point Names to add a network connection.

## Turning On Wi-Fi

Wi-Fi provides wireless Internet access over distances of up to about three hundred feet.

### Connecting to a Wi-Fi Network

Tap  > Settings > Wi-Fi.

Click  next to the Wi-Fi menu to turn it on, click  you can turn off the Wi-Fi function. Tap an access point to connect to it.

**NOTE:** If security features are implemented, you will need to enter a password.

Also, you can Place the QR code in the middle position below to connect to WIFI.

### Checking the Wi-Fi Network Status

You can check the Wi-Fi network by looking at the  icon in the status bar.

### USB tethering & portable hotspot

Share your phone's data connection via USB or as a portable Wi-Fi hotspot.

### Enabling USB tethering

**TIPS:** The PC accesses the Internet via the phone's mobile network. Therefore, set up the networks connection correctly before you try to use the phone as a modem.

## Disabling USB tethering

Tap  > **Settings** > **Network and internet** > **Hotspot and tethering** > **USB and USB PC internet share** and clear the **USB tethering** check box.

You can also just pull out the USB cable.

## Enabling the Wi-Fi Hotspot

You can use the phone as a portable WLAN router, to share your phone's internet connection with one or more PC or other devices.

### NOTE:

When the portable Wi-Fi hotspot function is enabled, you cannot use your phone's applications to access the internet via its Wi-Fi connection.

You can configure the Wi-Fi hotspot as follows:

- Tap  > **Settings** > **Network and internet** click  next to the Wi-Fi hotspot to turn it on.
- Tap **Set up Wi-Fi hotspot** to set up portable Wi-Fi hotspot. Now you can find the hotspot on other devices and connect to.

## Disabling the Wi-Fi Hotspot

Tap  > **Settings** > **Network and internet** click  next to the Wi-Fi hotspot to turn it off.

## Browsing the Internet

You can use your phone to get on the Internet via a network or Wi-Fi connection.

Tap  > **Chrome**.

# Making the Most of Multimedia

## Camera

Your phone has a camera function. Tap  >Camera. Tap  to take a picture. To view it, just tap the picture icon in the left corner of the screen and slide left or right to select the function you want.

## FM

With FM Radio, you can search for radio channels, listen to them, and save them on your phone. Note that the quality of the radio broadcast depends on the coverage of the radio station in your area. The wired headset works as an antenna, so always connect the headset when using the radio.

To tune in, plug your headset into your phone.

Tap  >FM Radio.

## Playing Music

You can play digital audio files from your phone's memory card in Music. Before playing music, you need to copy music files to the memory card location.

Tap >  **Music** to open the Music Screen.

Click the Music category label > music files to start playing.

Adjust the volume with Volume Keys.

## Gallery

Tap  >**Gallery**. You can use the Gallery to view pictures and play videos. You can also do some basic editing of your pictures – such as

setting them as wallpaper or contact photo and sharing with friends.

## Sound Recorder

Sound Recorder enables you to record your voice memos.

Tap  >Sound Recorder.

Tap  to start recording.

Tap  to stop recording.

Tap  to play back the voice recording.

Save the voice recording after stop or tap Discard to delete the recording.

## Sorting out Your Phone Settings

### Bluetooth

Bluetooth is a short-range wireless communication technology.

Phones or other devices with Bluetooth capabilities can exchange information wirelessly within about ten meters. The Bluetooth devices must be paired before the communication is performed.

Tap  >Settings>Connected devices-Bluetooth.

Click  next to the Bluetooth menu to turn it on. When Bluetooth is on, the  icon will appear in the status bar.

Tap Bluetooth. Your phone will show all visible Bluetooth devices in range.

Tap the device you want to pair with and operate according to the message prompt. When both devices to be paired accept the connection, the pairing is completed.

**TIPS:** Tap your device name to make your phone discoverable if other

devices try to pair with your phone.

## Setting Date and Time

Tap  **Settings**> **system**-.

Tap **Automatic Date & time** and select Off if you want to set the time and date by yourself.

Set date, time, and change the other options.

## Display Settings

Tap >**Settings**>**Display**, you can adjust the display settings as you like:

**Wallpaper**: Set the wallpaper of the phone.

**Brightness**: Adjust brightness of the screen.

**Adaptive brightness**: Rotate the screen display as you rotate the phone.

**Sleep**: Set the delay for the screen to automatically turn off.

## Sound Settings

Tap >**Settings**>**Audio profiles**-the sound settings, such as ringtones, volume and vibrate.

## Language Settings

You can change the language of your phone system in two simple steps.

Tap >**Settings**>**Language & input**> **Language**.

Select a language from the list given.

## Security Settings

Here is how to protect your phone and SIM card from unauthorized

use.

Tap  > **Settings** > **Security** > **Screen lock**. You can select the screen lock. When power on your phone or unlock touch screen devices you will be required to input pattern/PIN/password/voice, etc. The following is the introduction function:

None	Disable the screen lock	PIN	Use the PIN to unlock
Swipe	Select the swipe to unlock	Password	Use the password lock screen
Pattern	Creating Your Screen Unlock Pattern		

## Managing Your Device Memory

Tap  > **tap** > **Settings** > **Storage**.

You can view the space information of the SD card and the phone storage.

## Reset to Factory Settings

Tap  > **Settings** > **Backup & reset** > **Factory data reset** > **Reset phone** > **Erase everything**.

**WARNING:** All your personal information and downloaded applications on your phone will be erased after the resetting.

## Google

Tap  to google GO.

## Clock

Tap  >Clock, you can view the clock or set the alarm.

Tap the top of the screen icon can be switched to the countdown and stopwatch functions from the clock interface.

## Calculator

You can use the phone directly to perform simple mathematical calculations.

1. Tap **Calculator**.
2. Click the button corresponding with the calculator display, perform basic arithmetic.

**TIPS:** Tap Menu Key > Advanced panel to use scientific calculation.

## Screen record

Pull down the bar and tap the screen record, can record it.

## For Your Safety

### General Safety

	Do not make or receive handheld calls while driving. And never text while driving.		Do not use at petrol stations.
	Keep your phone at least 15 mm away from your ear or body while making calls.		Your phone may produce a bright or flashing light.

	Small parts may cause a choking.		Do not dispose of your phone in fire.
	Your phone can produce a loud sound.		Avoid contacting with anything magnetic.
	Keep away from pacemakers and other electronic medical devices.		Avoid extreme temperatures.
	Switch off when asked to in hospitals and medical facilities.		Avoid contact with liquids. Keep your phone dry.
	Switch off when told to in aircrafts and airports.		Do not take your phone apart.
	Switch off when near explosive materials or liquids.		Only use approved accessories.
	Do not rely on your phone for emergency communications.		To prevent hearing damage, do not listen at high volume levels for long periods.

## Distraction

### Driving

Full attention must be given to always driving to reduce the risk of an accident. Using a phone while driving (even with a hands-free kit) can cause distraction and lead to an accident. You must comply with local laws and regulations restricting the use of wireless devices while driving.

## **Operating Machinery**

Full attention must be given to operating the machinery to reduce the risk of an accident.

## **Product Handling**

### **General Statement on Handling and Use**

You alone are responsible for how you use your phone and any consequences of its use.

You must always switch off your phone wherever the use of a phone is prohibited. Use of your phone is subject to safety measures designed to protect users and their environment.

Always treat your phone and its accessories with care and keep it in a clean and dust-free place.

Do not expose your phone or its accessories to open flames or lit tobacco products.

Do not expose your phone or its accessories to liquid, moisture, or high humidity.

Do not drop, throw, or try to bend your phone or its accessories.

Do not use harsh chemicals, cleaning solvents, or aerosols to clean the device or its accessories.

Do not paint your phone or its accessories.

Do not attempt to disassemble your phone or its accessories, only authorized personnel can do so.

Do not expose your phone or its accessories to extreme temperatures, minimum - [5] and maximum + [50] degrees Celsius.

Please check local regulations for disposal of electronic products.

Do not carry your phone in your back pocket as it could break when you sit down.

## **Small Children**

Do not leave your phone and its accessories within the reach of small children or allow them to play with it.

They could hurt themselves or others or could accidentally damage the phone.

Your phone contains small parts with sharp edges that may cause an injury or may become detached and create a choking hazard.

## **Demagnetization**

To avoid the risk of demagnetization, do not allow electronic devices or magnetic media close to your phone for a long time.

## **Electrostatic Discharge (ESD)**

Do not touch the SIM card's metal connectors.

## **Antenna**

Do not touch the antenna unnecessarily.

## **Normal Use Position**

When placing or receiving a phone call, hold your phone to your ear, with the bottom towards your mouth.

## **Air Bags**

Do not place a phone in the area over an air bag or in the air bag deployment area.

Store the phone safely before driving your vehicle.

## **Seizures/ Blackouts**

The phone can produce a bright or flashing light.

## **Repetitive Motion Injuries**

To minimize the risk of RSI when texting or playing games with your phone:

Do not grip the phone too tightly.

Press the buttons lightly.

Use specific features which are designed to minimize the times of pressing buttons, such as Message Templates and Predictive Text.

Take lots of breaks to stretch and relax.

## **Emergency Calls**

This phone, like any wireless phone, operates using radio signals, which cannot guarantee connection in all conditions. Therefore, you must never rely solely on any wireless phone for emergency communications.

## **Loud Noise**

This phone can produce loud noises, which may damage your hearing. Turn down the volume before using headphones, Bluetooth stereo headsets or other audio devices.

## **Phone Heating**

Your phone may become warm during charging and during normal use.

## **Electrical Safety**

### **Accessories**

Use only approved accessories.

Do not connect with incompatible products or accessories.

Take care not to touch or allow metal objects, such as coins or key rings, to contact or short-circuit in the battery terminals.

### **Connection to a Car**

Seek professional advice when connecting a phone interface to the vehicle electrical system.

### **Faulty and Damaged Products**

Do not attempt to disassemble the phone or its accessory.

Only qualified personnel can service or repair the phone or its accessory.

If your phone or its accessory has been submerged in water, punctured, or subjected to a severe fall, do not use it until you have taken it to be checked at an authorized service center.

## **Interference**

### **General Statement on Interface**

Care must be taken when using the phone near personal medical devices, such as pacemakers and hearing aids.

## **Pacemakers**

Pacemaker manufacturers recommend that a minimum separation of 15 cm be maintained between a mobile phone and a pacemaker to avoid potential interference with the pacemaker. To achieve this, use the phone on the opposite ear to your pacemaker and do not carry it in a breast pocket.

## **Hearing Aids**

People with hearing aids or other cochlear implants may experience interfering noises when using wireless devices or when one is nearby.

The level of interference will depend on the type of hearing device and the distance from the interference source, increasing the separation between them may reduce the interference. You may also consult your hearing aid manufacturer to discuss alternatives.

## **Medical Devices**

Please consult your doctor and the device manufacturer to determine if operation of your phone may interfere with the operation of your medical device.

## **Hospitals**

Switch off your wireless device when requested to do so in hospitals, clinics, or health care facilities. These requests are designed to prevent interference with sensitive medical equipment.

## **Aircraft**

Switch off your wireless device whenever you are instructed to do so by airport or airline staff.

Consult the airline staff about the use of wireless devices on board the

aircraft. If your device offers a 'flight mode' this must be enabled prior to boarding an aircraft.

## **Interference in Cars**

Please note that because of possible interference to electronic equipment, some vehicle manufacturers forbid the use of mobile phones in their vehicles unless a hands-free kit with an external antenna is included in the installation.

## **Explosive Environments**

### **Petrol Stations and Explosive Atmospheres**

In locations with potentially explosive atmospheres, obey all posted signs to turn off wireless devices such as your phone or other radio equipment.

Areas with potentially explosive atmospheres include fueling areas, below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders.

### **Blasting Caps and Areas**

Power off your mobile phone or wireless device when in a blasting area or in areas posted power off "two-way radios" or "electronic devices" to avoid interfering with blasting operations.

## **System update**

System supports firmware upgrade only from official website or server. If user uses third party ROM image and/or any other root method to upgrade firmware, it will cause phone unstable and raise further security

risk and pitfalls. Please note that users should take all responsibility for all these behaviors.

## Common fault diagnosis

The faults	reasons
Cannot turn on	1、Whether there is electricity in the battery 2、Battery is correct.
SIM is faulty	1、SIM is dirty. Please clean it. 2、insert the SIM again. 3、SIM is faulty replace it.
Bad signal	Check the signal display in the status bar.
The phone cannot call	May have a strong jamming signal around the environment.
Cannot charge	May be the battery discharge. Need to wait for a few minutes.
Taking pictures is not clear	Please make sure that both sides of the camera lens cleaning.

